




**Einbauanleitung Elektrosatz
Anhängervorrichtung mit 12-N Steckdose
lt. DIN/ISO Norm 1724**

**Instructions de montage du faisceau
électrique pour crochet d'attelage
conforme à la norme
DIN/ISO 1724 prise 12-N**


**Fitting instructions electric wiringkit
towbar with 12-N socket up to
DIN/ISO norm 1724**

**Montage-handleiding elektrokabelset voor
trekhaak met 12-N contactdoos
vlg. DIN/ISO norm 1724**



**Instrucciones de montaje de
kit eléctrico para enganche de
remolque con caja de conexiones
12-N según norma DIN/ISO 1724**

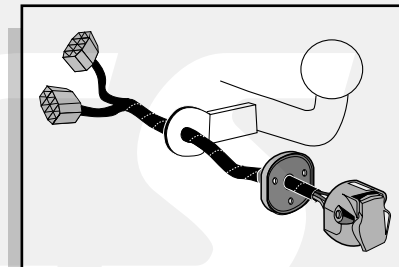


Volkswagen Golf IV hb 1997- / Bora sdn 10/98-

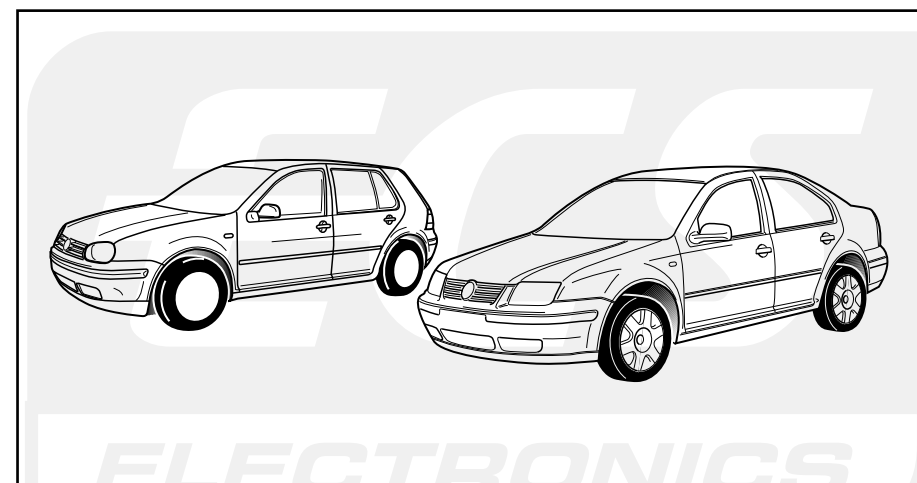

Bestel Nr.: VW-005-BB

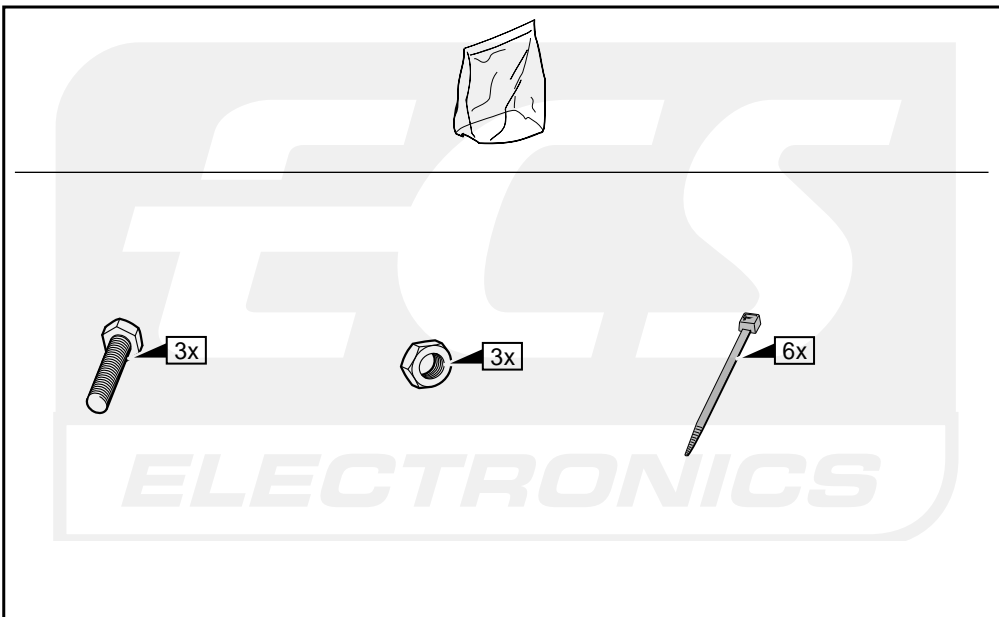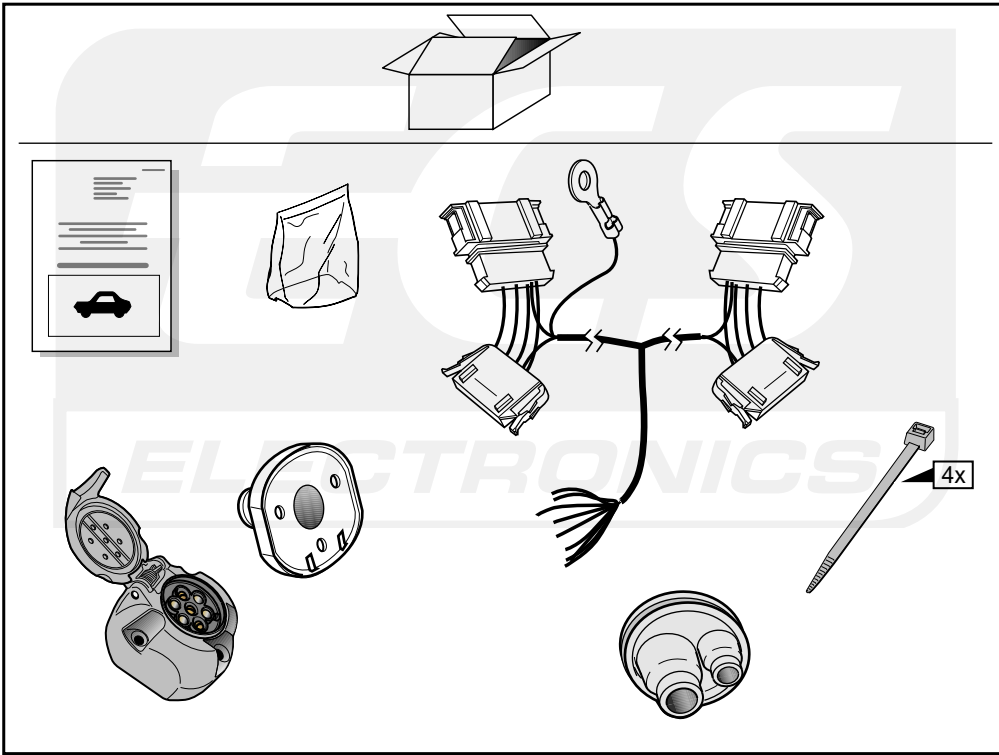

28

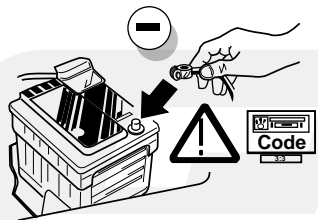

29


! **CONTROLEER FUNCTIES !**
CHECK FUNCTIONS !
FUNKTIONEN KONTROLIEREN !
CONTRÔLER LES FONCTIONS !
¡CONTROLAR LAS FUNCIONES!

INFO


* VW Golf IV HB 1997-:
 Fig. 1 t/m 16

*VW Bora SEDAN 10/1998-:
 Fig. 17 t/m 32


1 VW Golf IV Hatchback 1997-

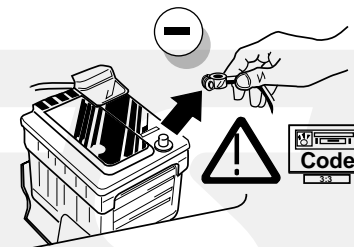


30

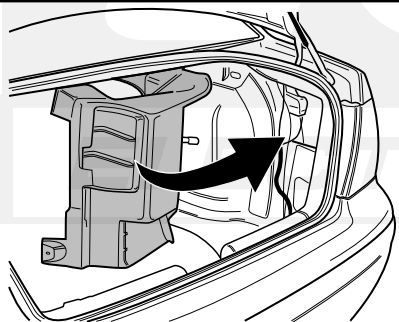


31

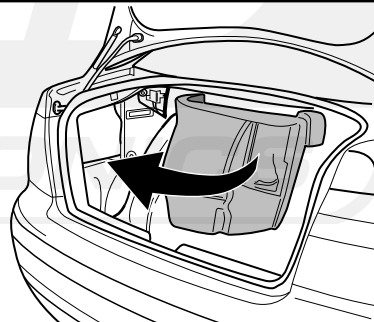


2

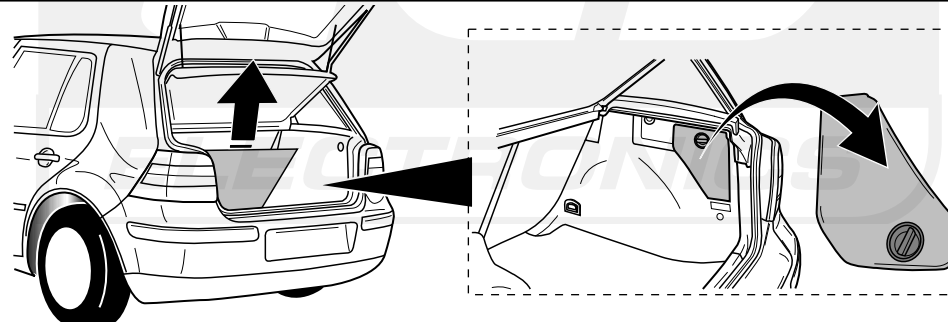


32





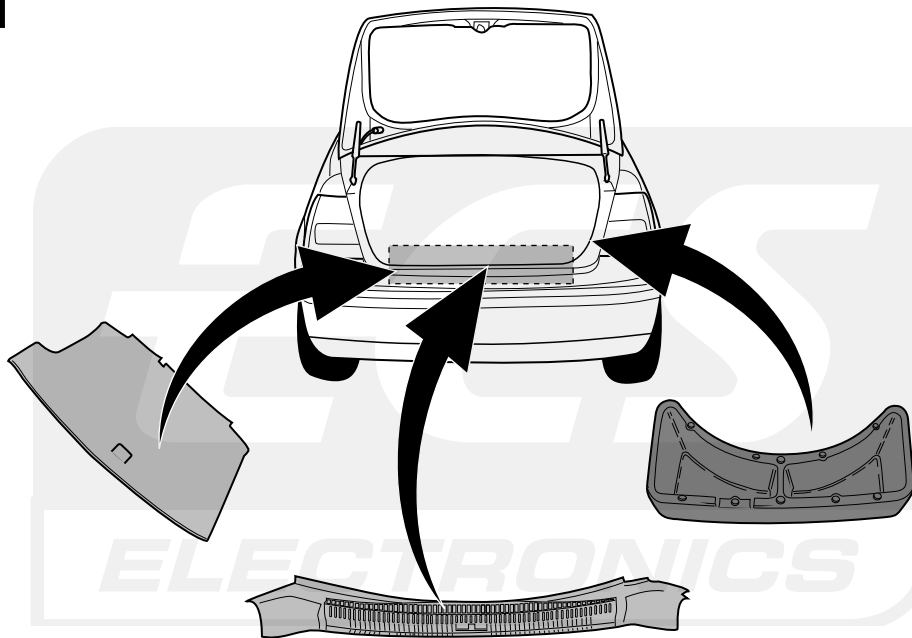


3

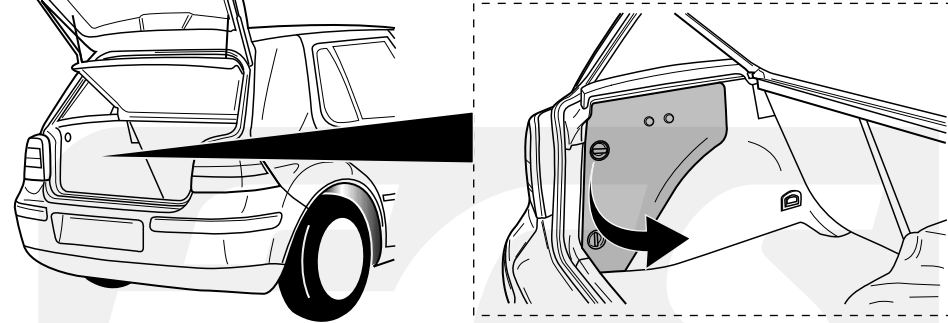

4




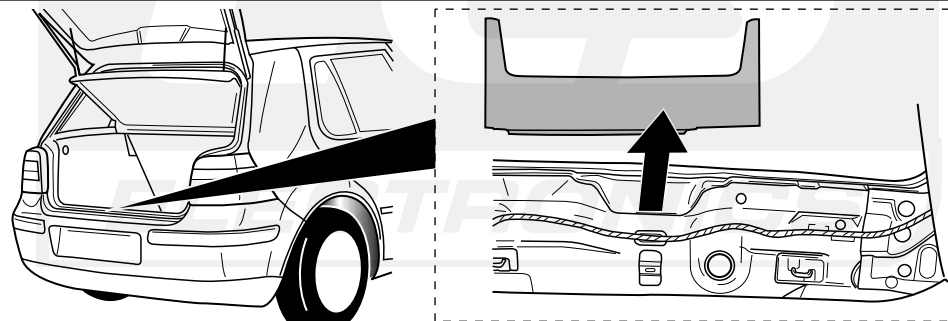


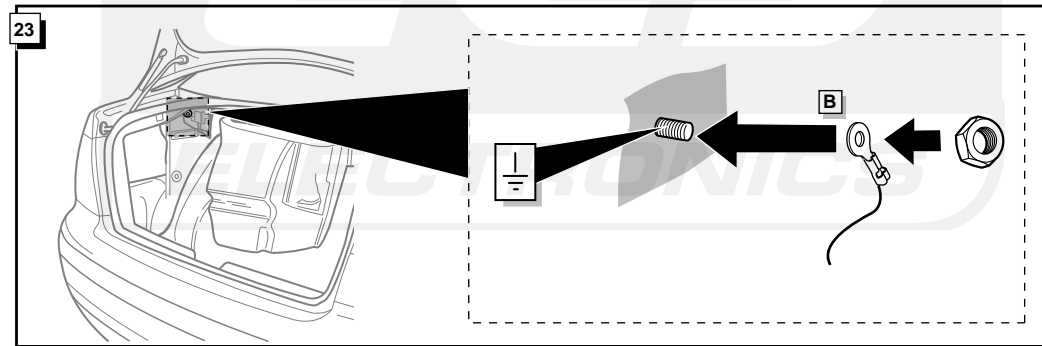
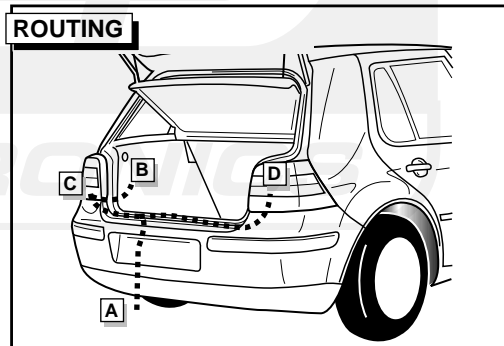
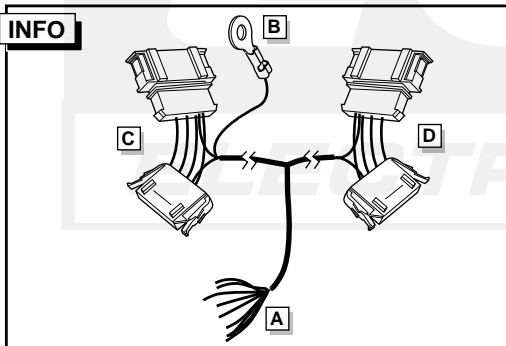
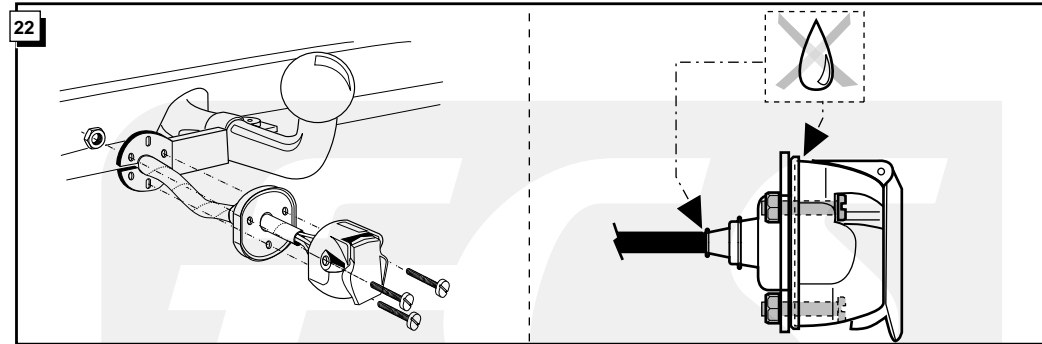
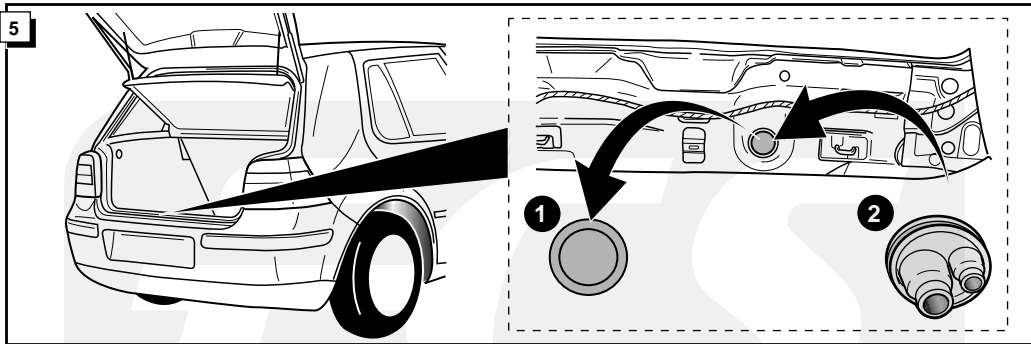


INFO

Anschluß Steckdose / Connection de la prise / Socket connection / Contactdoos aansluiting / Conexiones del enchufe



| DIN/ISO 1724 | | D | F | GB | NL | ES |
|--------------|--------|---------|--------|--------|-------|----------|
| ← | 1/L | gelb | jaune | yellow | geel | amarillo |
| ↔ | 2 | blau | bleu | blue | blauw | azul |
| ⏏ 1-8 | 3/31 | weiß | blanc | white | wit | blanco |
| → | 4/R | grün | vert | green | groen | verde |
| ☀ | 5/58-R | braun | marron | brown | bruin | marrón |
| STOP | 6/54 | rot | rouge | red | rood | rojo |
| ☀ | 7/58-L | schwarz | noir | black | zwart | negro |
| ⏏ → ↔ ← ⏏ | 8/58-b | grau | gris | grey | grijs | gris |

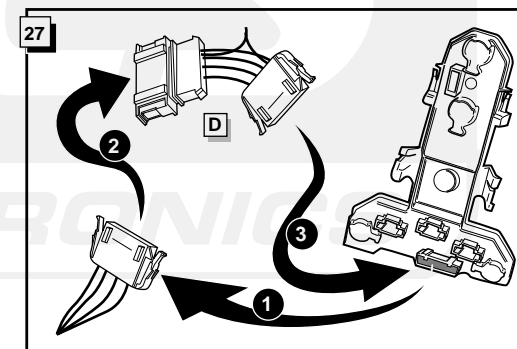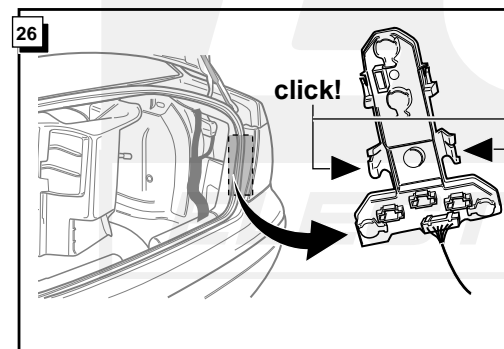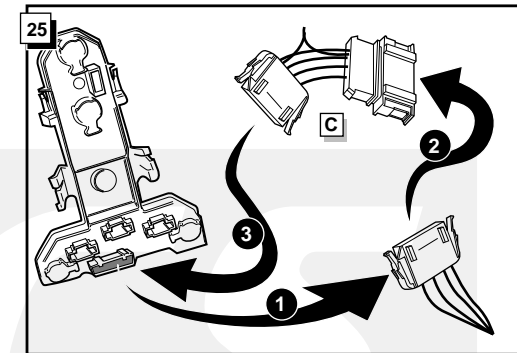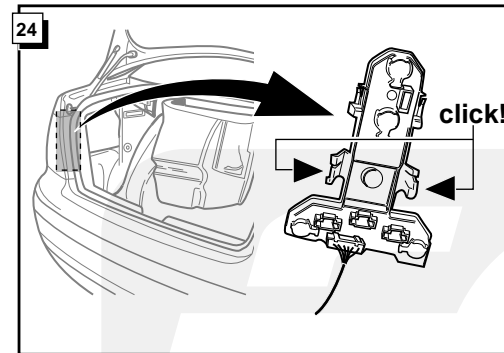

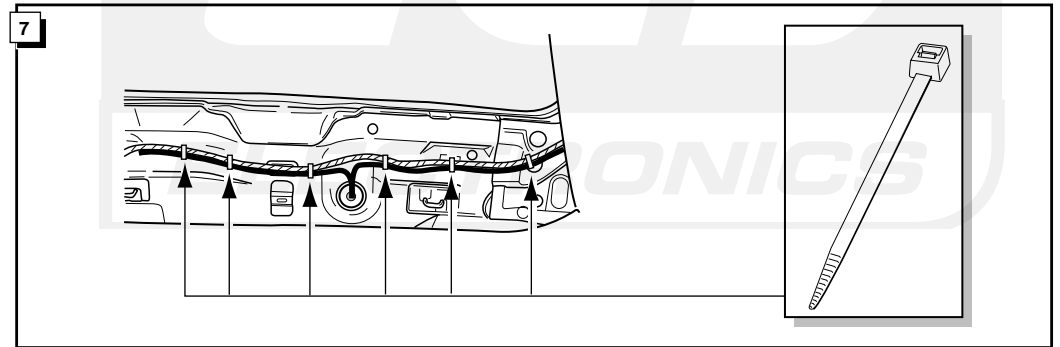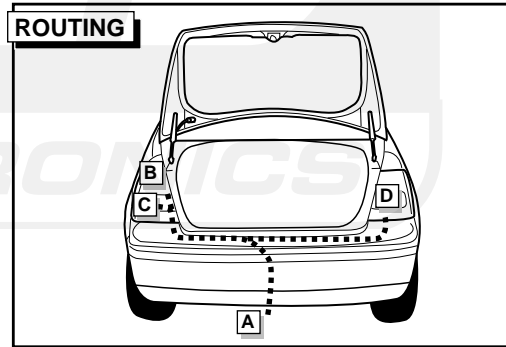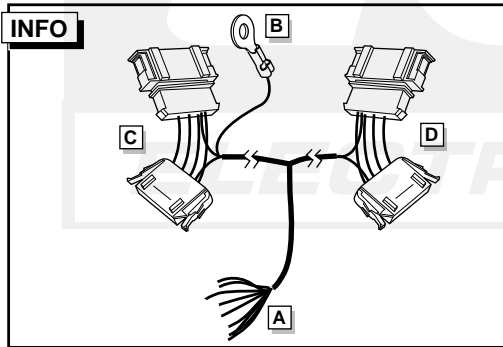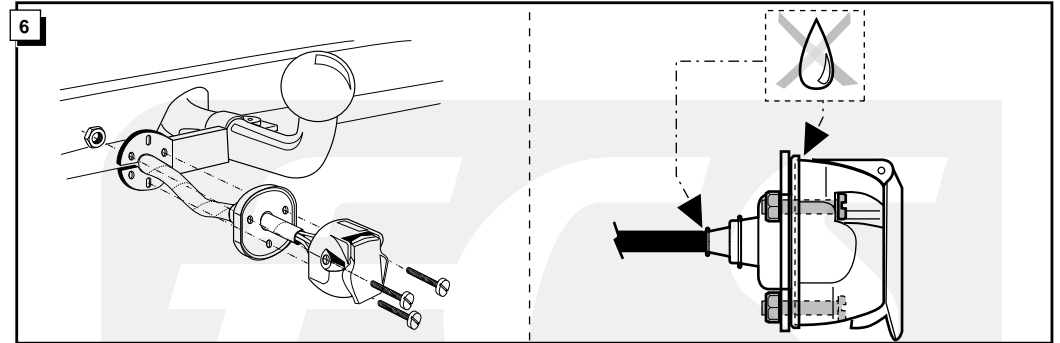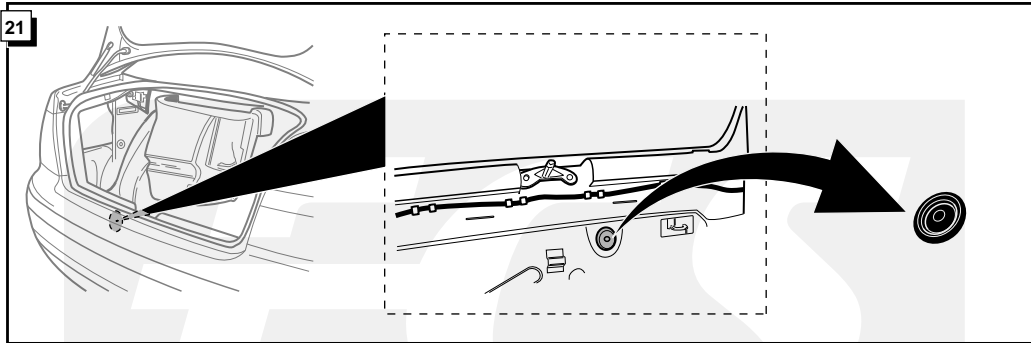




INFO

Anschluß Steckdose / Connection de la prise / Socket connection /
 Contactdoos aansluiting / Conexiones del enchufe

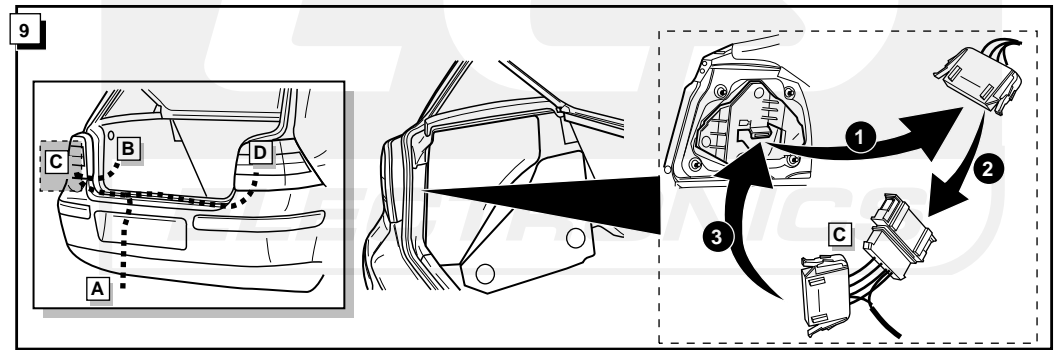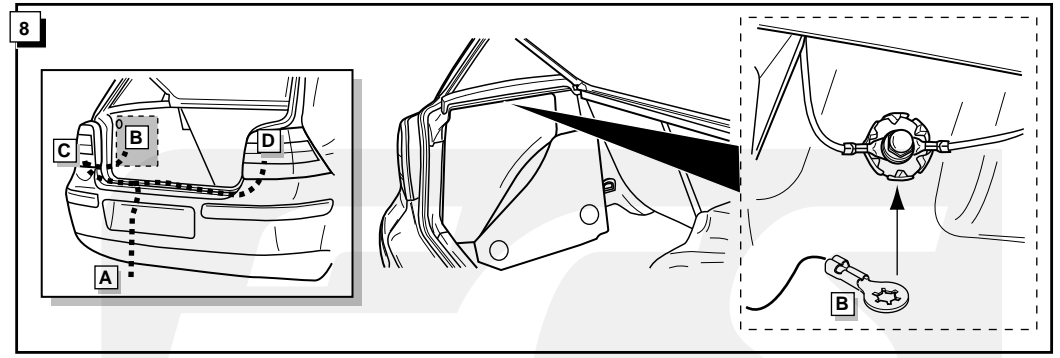



| DIN/ISO 1724 | | D | F | GB | NL | ES |
|--------------|--------|---------|--------|--------|-------|----------|
| | 1/L | gelb | jaune | yellow | geel | amarillo |
| | 2 | blau | bleu | blue | blauw | azul |
| | 3/31 | weiß | blanc | white | wit | blanco |
| | 4/R | grün | vert | green | groen | verde |
| | 5/58-R | braun | marron | brown | bruin | marrón |
| | 6/54 | rot | rouge | red | rood | rojo |
| | 7/58-L | schwarz | noir | black | zwart | negro |
| | 8/58-b | grau | gris | grey | grijs | gris |

10

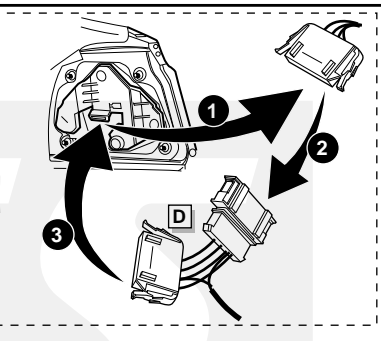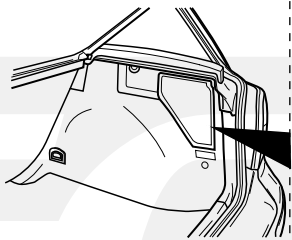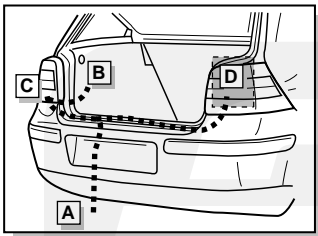


17

VW Bora Sedan 10/1998-

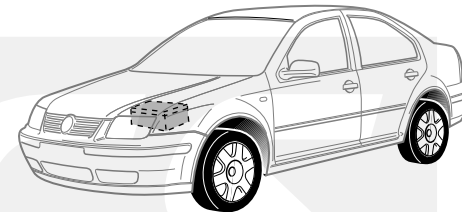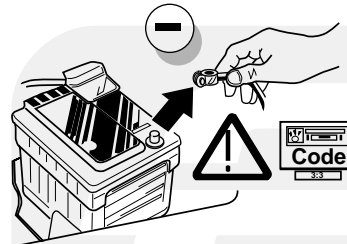


11

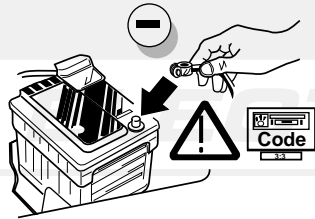


12

! CONTROLEER FUNCTIES !
! CHECK FUNCTIONS !
! FUNKTIONEN KONTROLIEREN !
! CONTRÔLER LES FONCTIONS !
! CONTROLAR LAS FUNCIONES!


18

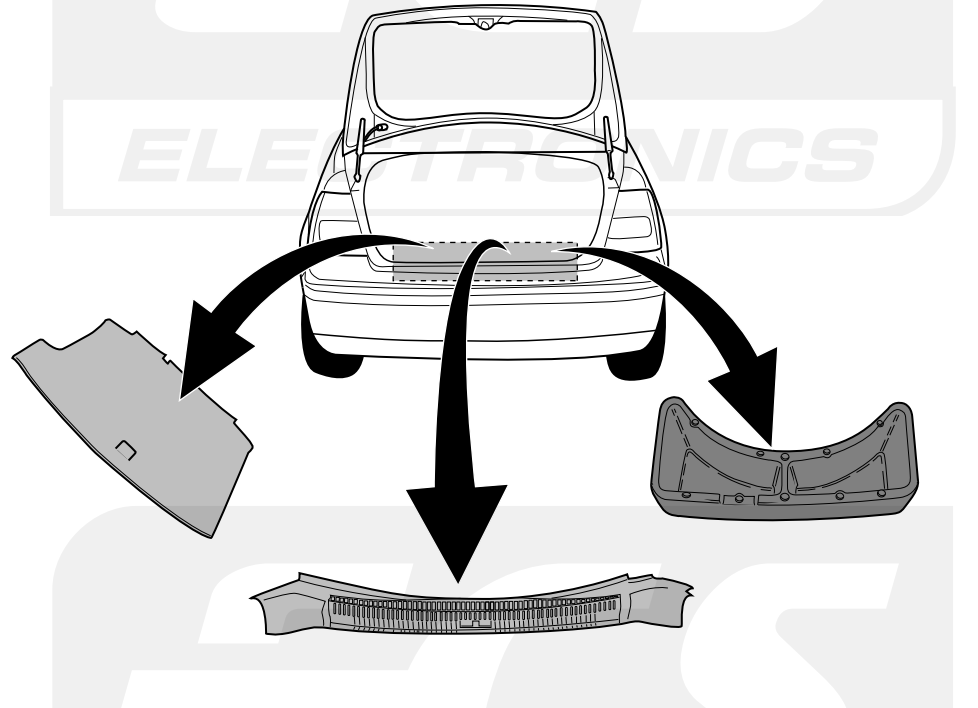


13

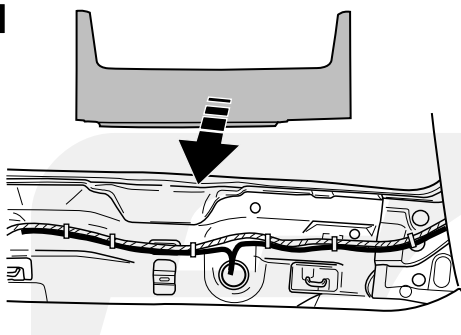


14

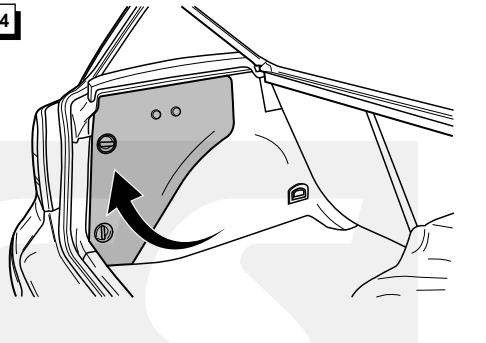


15

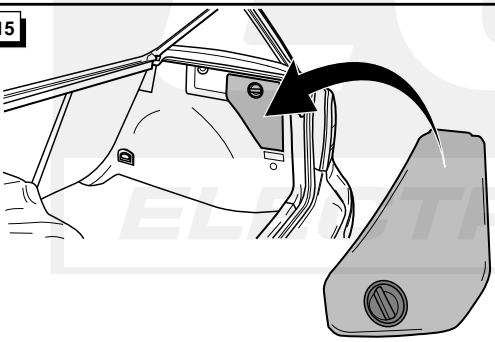

16

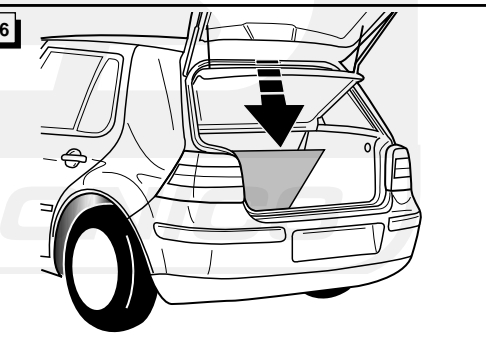

19

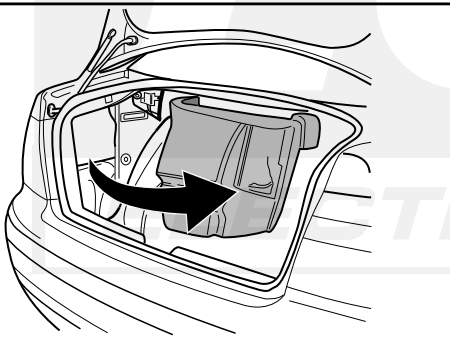

20

