




Einbauanleitung Elektrosatz
Anhängervorrichtung mit 12-N Steckdose
lt. DIN/ISO Norm 1724

Instructions de montage du faisceau
électrique pour crochet d'attelage
conforme à la norme
DIN/ISO 1724 prise 12-N

Fitting instructions electric wiringkit
towbar with 12-N socket up to
DIN/ISO norm 1724

Montage-handleiding elektrokabelset voor
trekhaak met 12-N contactdoos
vlg. DIN/ISO norm 1724

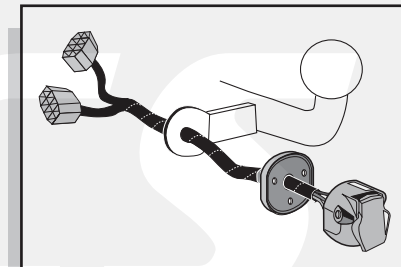

VW POLO 2002-





Bestel Nr.: VW-041-BB

* Teilliste


* Liste de pieces

* Part list

* Onderdelenlijst

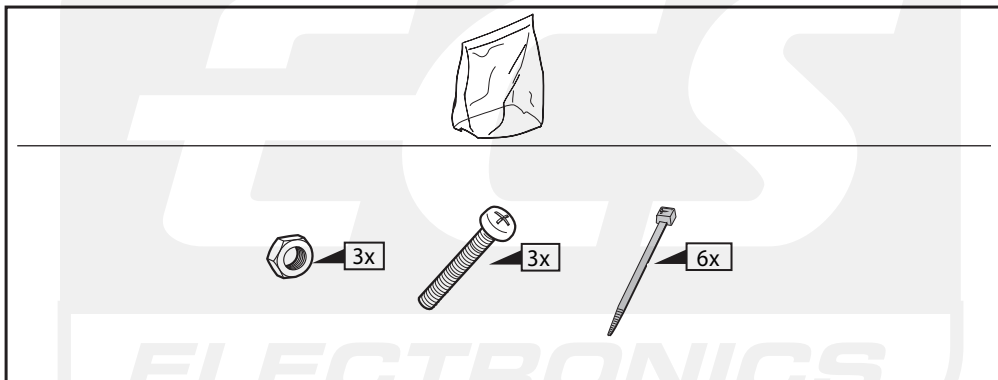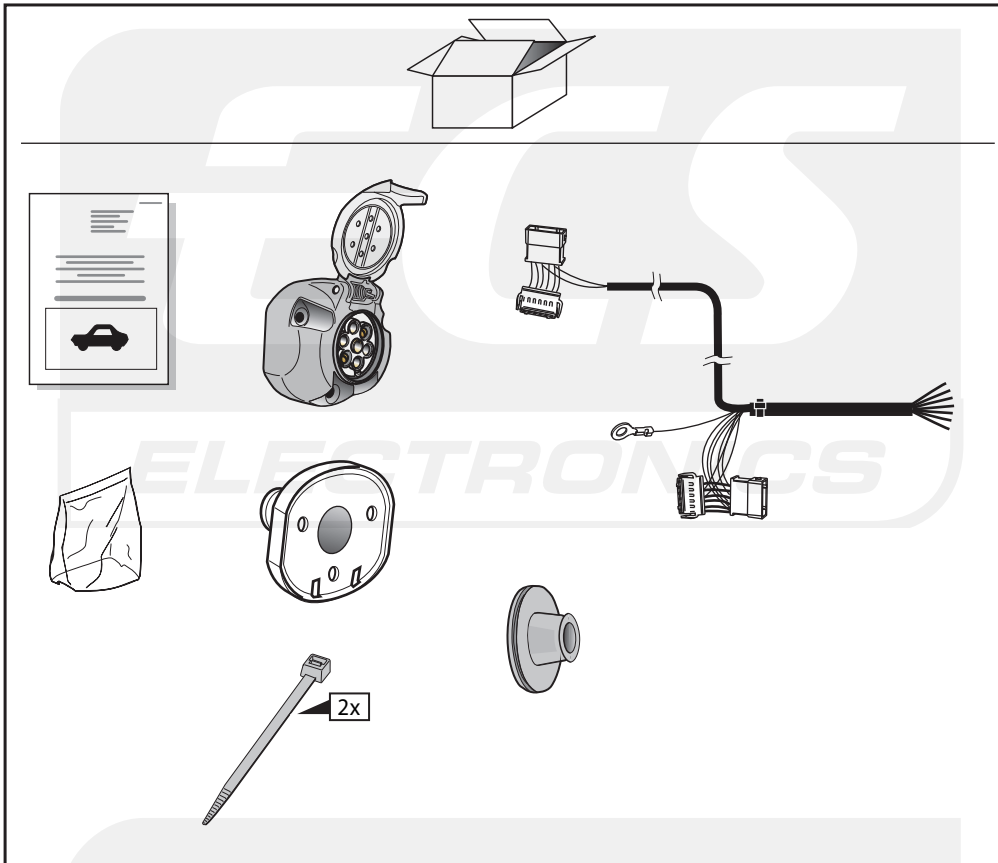


12

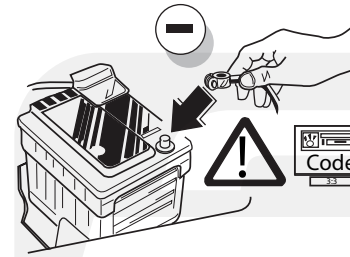


13

! FUNKTIONEN KONTROLLIEREN !
CONTRÔLER LES FONCTIONS !
CHECK FUNCTIONS !
● CONTROLEER FUNCTIES !


14








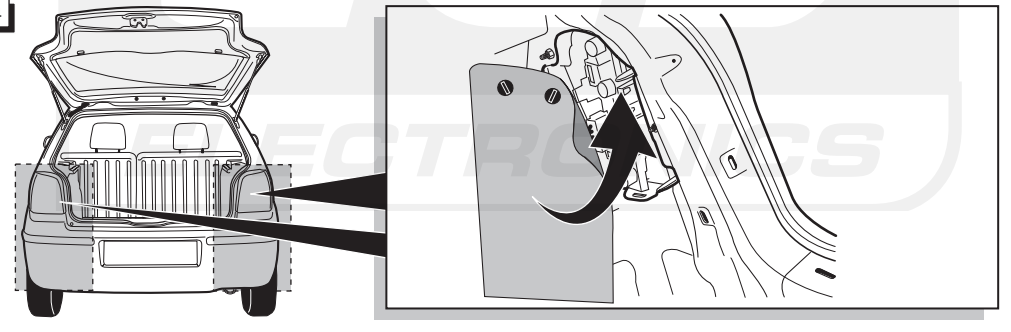


15

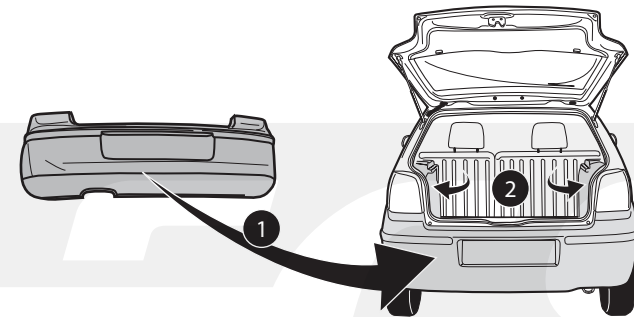


16

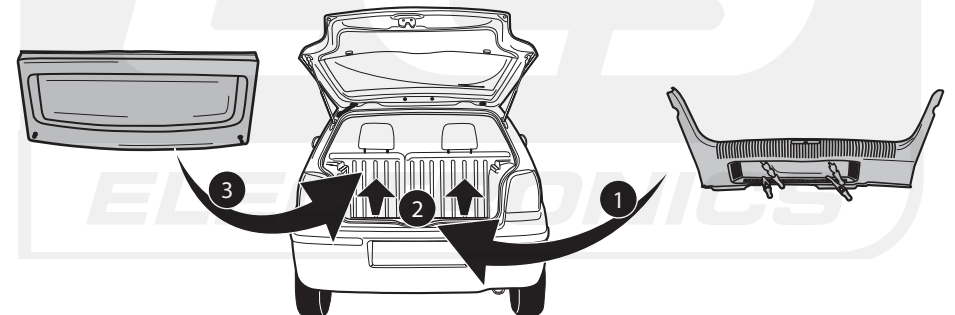


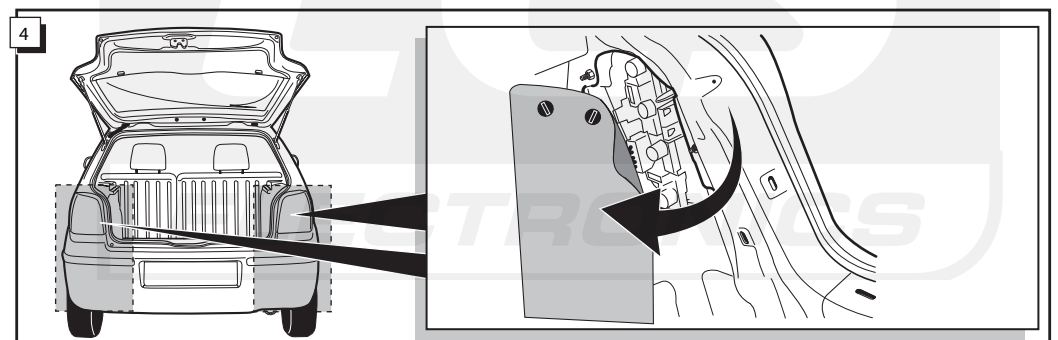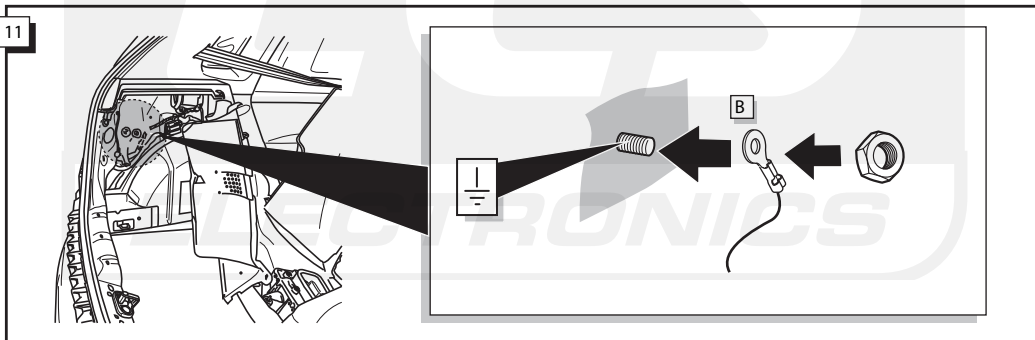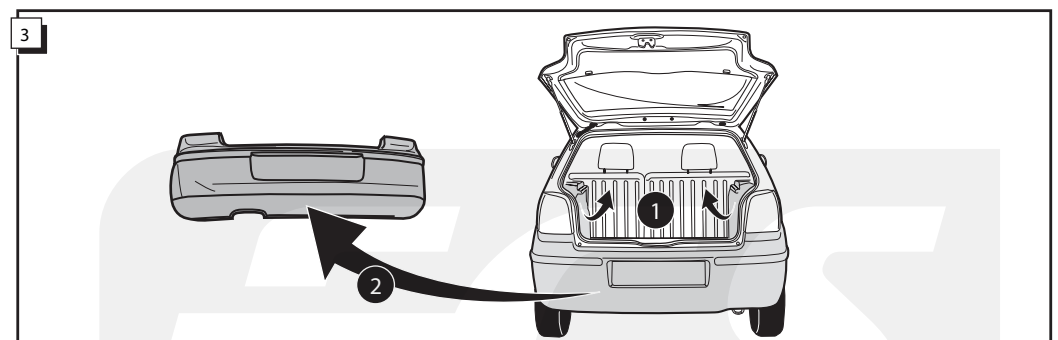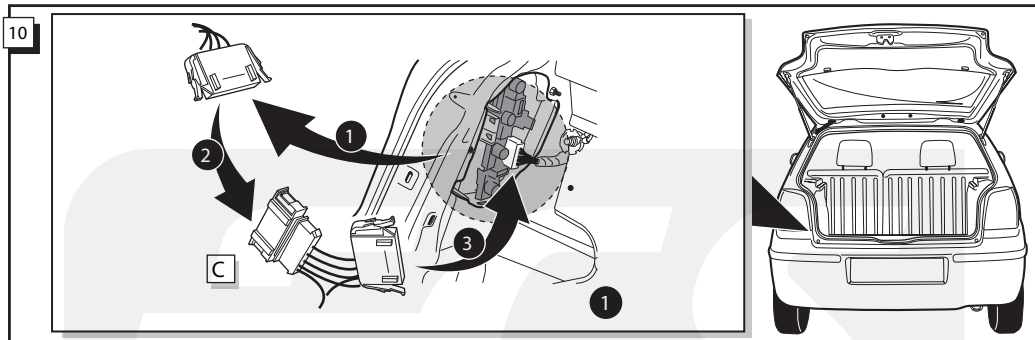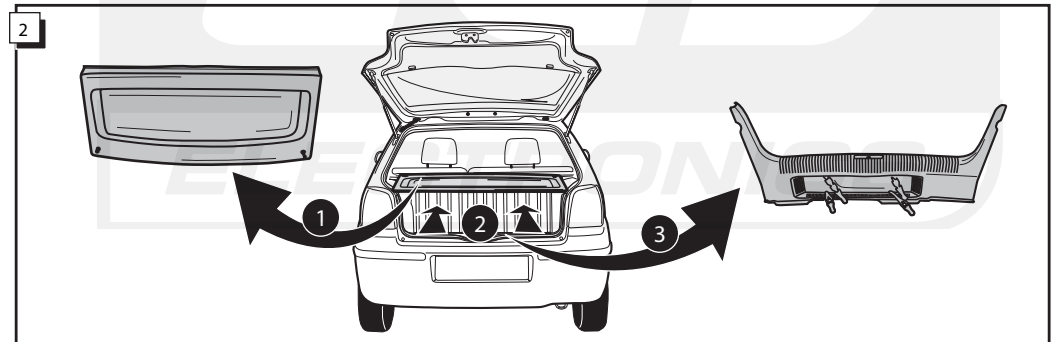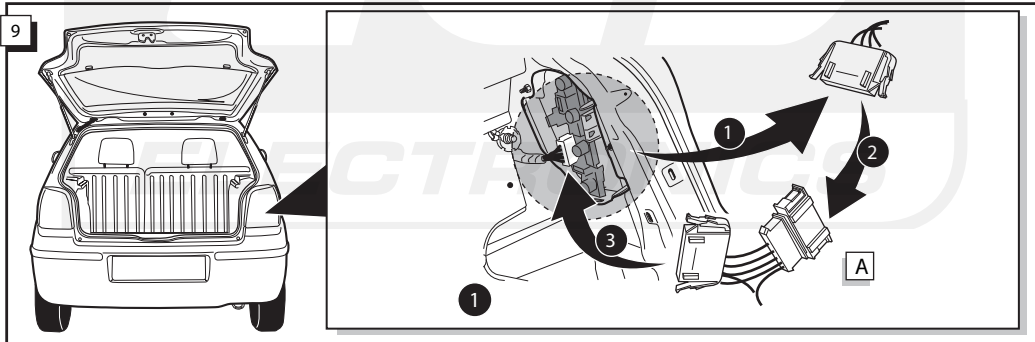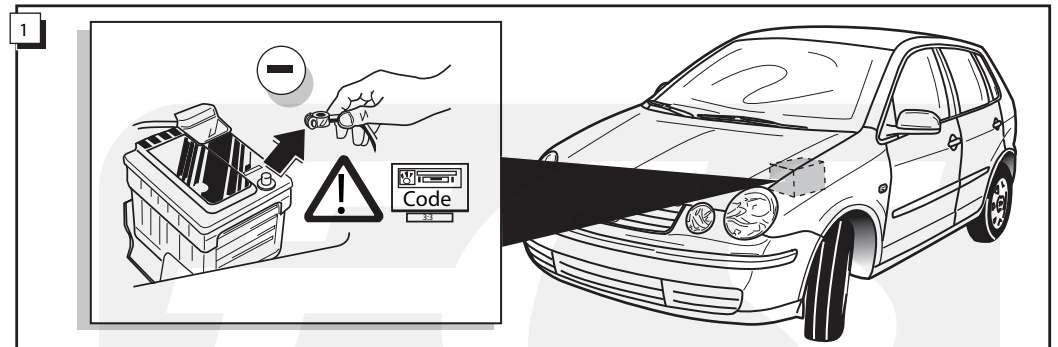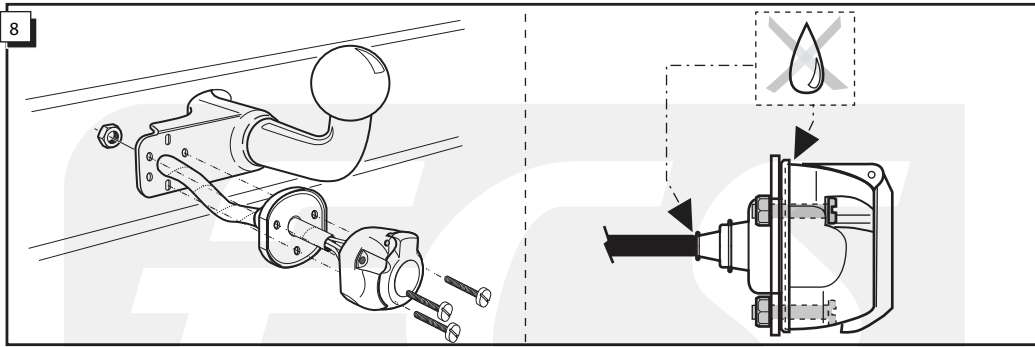


INFO

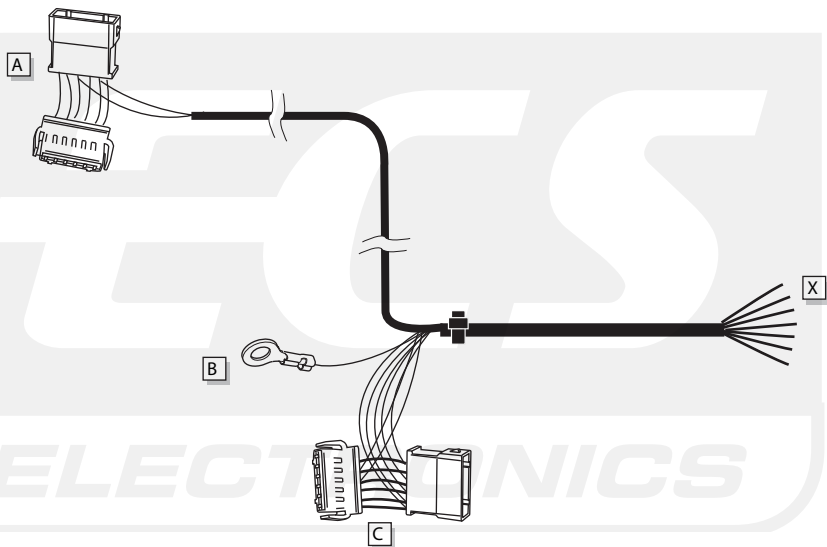


6

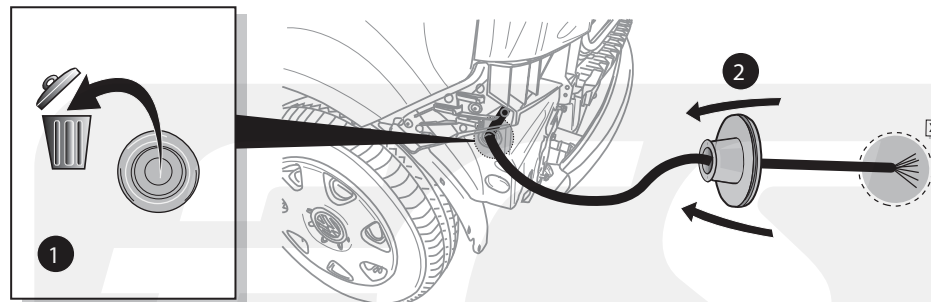


7

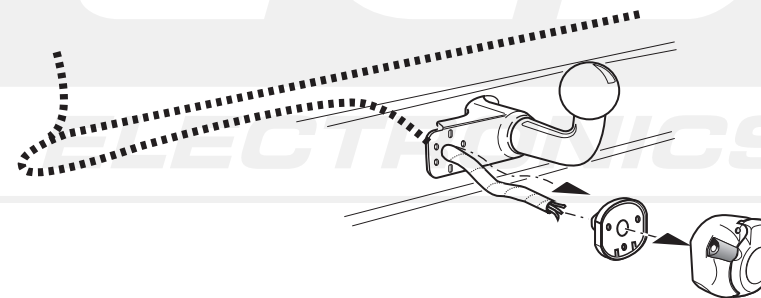

ROUTING

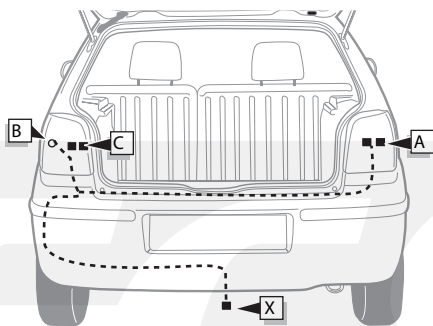

5

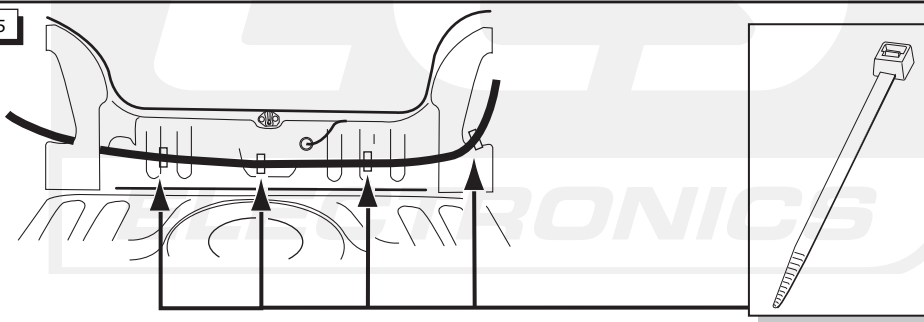

INFO

Anschluß Steckdose / Connection de la prise / Socket connection / Contactdoos aansluiting

| DIN/ISO 1724 | | (D) | (F) | (GB) | (NL) |
|--------------|--------|---------|--------|--------|-------|
| ↶ | 1/L | gelb | jaune | yellow | geel |
| ↷ | 2 | blau | bleu | blue | blauw |
| ⏏ | 1-8 | weiß | blanc | white | wit |
| ↶ | 4/R | grün | vert | green | groen |
| ☀ | 5/58-R | braun | marron | brown | bruin |
| STOP | 6/54 | rot | rouge | red | rood |
| ☀ | 7/58-L | schwarz | noir | black | zwart |
| ↶↷ | 8/58-b | grau | gris | grey | grijs |